

PyroRaptor USB/I2C/SPI/UART/GPIO MK-11009

December 26, 2014

IONOTRONICS Corporation

<http://www.ionotronics.com>

Copyright (C) 2014 IONOTRONICS

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.3 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

Table of Contents

1	Introduction.....	5
2	Pyroraptor.....	5
2.1	I2C Master Support	6
2.2	Pyroraptor Java Application	11
2.3	SPI Master Support	12
3	SPI Master/PIC Programming/SPI Firmware Download	17
4	Pyroraptor Applications in Robotics.....	21
4.1	Rover	21
4.2	Example Setting Up the Pololu Accelerometer/Gyro/Compass I2c Device	23
5	Appendix A: PyroRaptor Java Application Installation	29
6	Appendix Hirose DF11 Series Connectors	30
7	GNU Free Documentation License.....	31

List of Figures

Figure 1 Pyraptor with Switches Set for I2C and SPI Interfacing	5
Figure 2 Pyraptor support for SPI Master, UART, GPIO , ADC and SPI Support for Firmware development.....	6
Figure 3 Switch 3 used to configure the I2C bus supply for 5V or 3.3V Operation.	7
Figure 4 The I2C Interface Connections. Both Molex and Hirose 4 pin connectors are used. All are on the same bus.....	8
Figure 5 Pin description for I2C Bus Connectors.....	9
Figure 6 Switch settings for Pullup Resistor determination. Also whether a pullup resistor is used or it is open (in case Slave device has pullup resistors).....	10
Figure 7 4 Pin Hirose I2C Connection Pinout	10
Figure 8 Cartoon showing 4 pin Hirose Female Connections. Note we use White wire for SDA and Blue for SCL. We suggest that this wiring color scheme be used when cabling I2C connections.	11
Figure 9 Java Application Scanning I2C Devices.	12
Figure 10 SPI Master Support with Multiple Slave Selects	13
Figure 11 Java Application showing the SPI Tab in Action. Reading the manufacturing ID from an ATMEL SPI EEPROM.	14
Figure 12 Pyraptor Connections, and Switches. SPI uses J1. More Slave Selects available on J7 and J9.	15
Figure 13 SPI Master Connections	16
Figure 14 SPI Slave Selects	17
Figure 15 PIC Programming Conversion, SPI Firmware Download.	18
Figure 16 Programming Connections	19
Figure 17 Rover with I2C Sensors and Servo Control	21
Figure 18 Rover I2C Devices with Device Addresses	22
Figure 19 IONOTRONICS Java Application Showing I2C Bus Scan of Rover Through Pyraptor.....	23
Figure 20 Pyraptor Intefaced to Pololu MiniMU-9 Gyro, Accelerometer, and Compass	24
Figure 21 Java Application Scan of Pololu Device	25
Figure 22 Close up of Cabling to Pololu Device	26
Figure 23 Close up of Cabling to Pololu Device	27
Figure 24 Using Harbor Freight Vise to Secure Pyraptor	28
Figure 25 Guide to the Hirose DF11 series connector.....	30

1 Introduction

Pyroraptor is a USB to I2C/SPI/GPIO/PWM Bridge device. It supports the control of I2C and SPI devices by a Windows based or Linux based PCs. Pyraptor uses the ARM Cortex-M3 processor, specially the LPC1311/13/42/43 series System on a Chip from NXP. To support the USB to I2C/SPI/GPI/PWM bridge and provide a powerful C API for application development, the Pyraptor uses the Diolan DLN Firmware. To get more information on the Diolan DLN device visit <http://www.diolan.com>.

Pyraptor allows you to control I2C devices using a Java based Graphical User Interface written by IONOTRONICS. The Java Application uses the Java Native Interface (JNI) to interface to the device using the Diolan C API. With the Java Application you can start controlling I2C and SPI devices in short order. This Manual will go over configuring Payroraptor switches and also the cabling required to interface to I2C and SPI devices.

2 Pyraptor

The Pyraptor board is shown in Figure 1. The dimensions of the board are 1680 x 2000mil (42.672 x 50.8 mm). The switch settings are for interfacing to I2C and SPI devices.

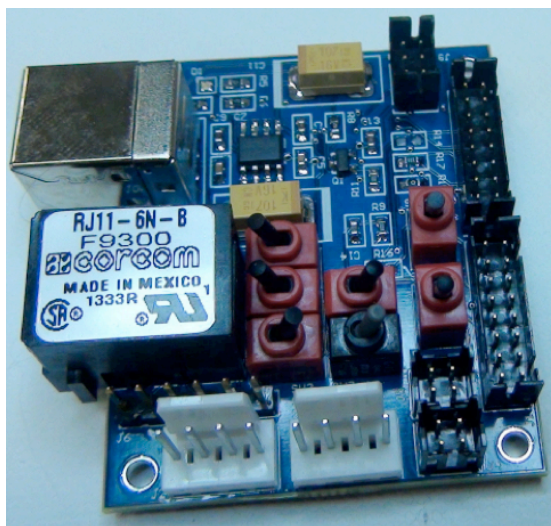


Figure 1 Pyraptor with Switches Set for I2C and SPI Interfacing

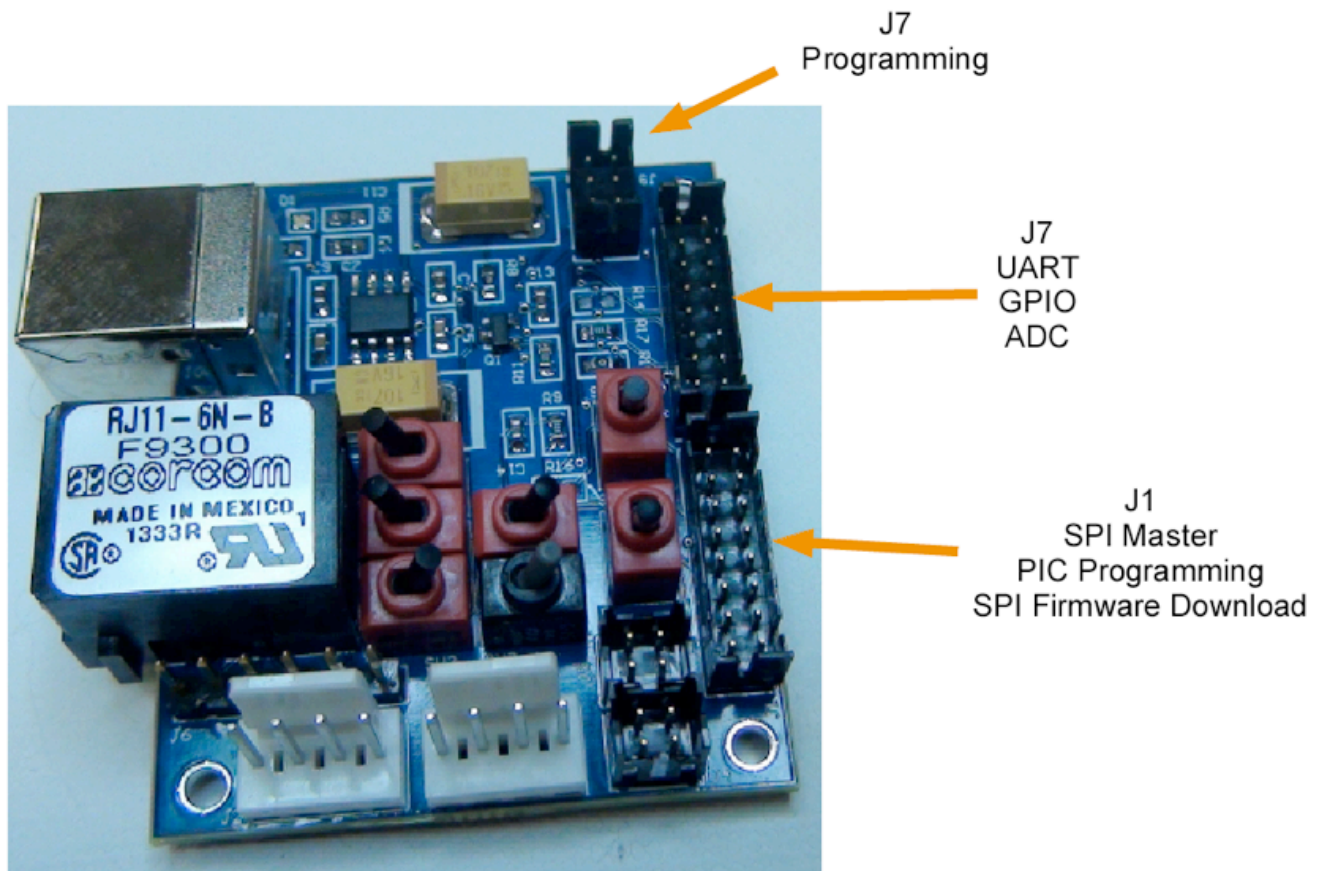


Figure 2 Pyroraaptor support for SPI Master, UART, GPIO , ADC and SPI Support for Firmware development.

2.1 I2C Master Support

Figure 3 shows Switch 3 settings for supporting 5V or 3.3V on the I2C Bus. Note if you do not want to supply power, simply do not connect the power in the cable. Figure 4 shows the connectors for I2C. All connectors are on the same bus. Figure 5 shows the I2C signals for the Molex and Hirose connectors (SDA, SCL, GND and Supply). Figure 6 shows the options for pullup resistors or if none are used on the bus (open).




SW3

☐ 5V

☐ 3.3V

Figure 3 Switch 3 used to configure the I2C bus supply for 5V or 3.3V Operation.

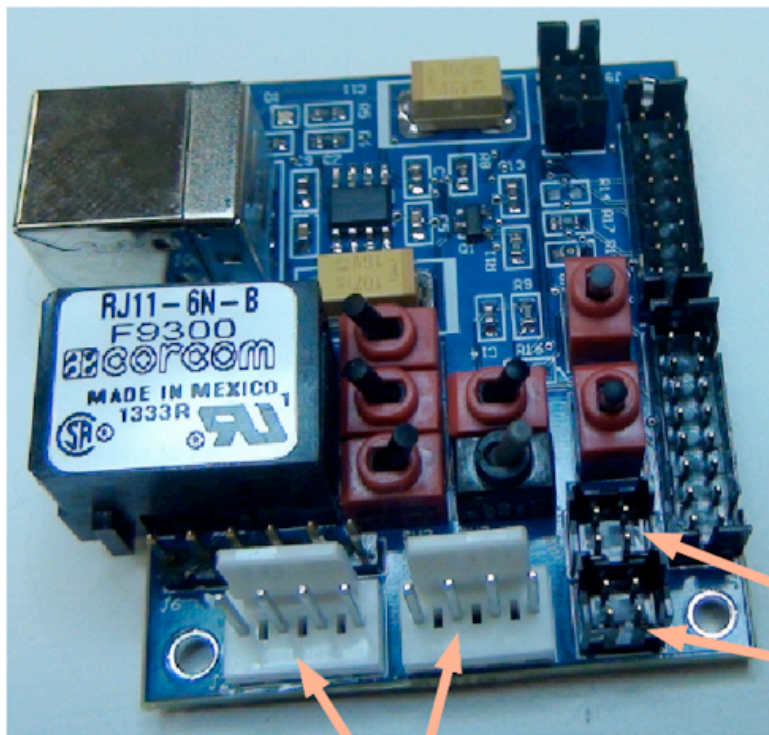

Molex 4 Pin I2C

Hirose 4 Pin I2C

Figure 4 The I2C Interface Connections. Both Molex and Hirose 4 pin connectors are used. All are on the same bus.

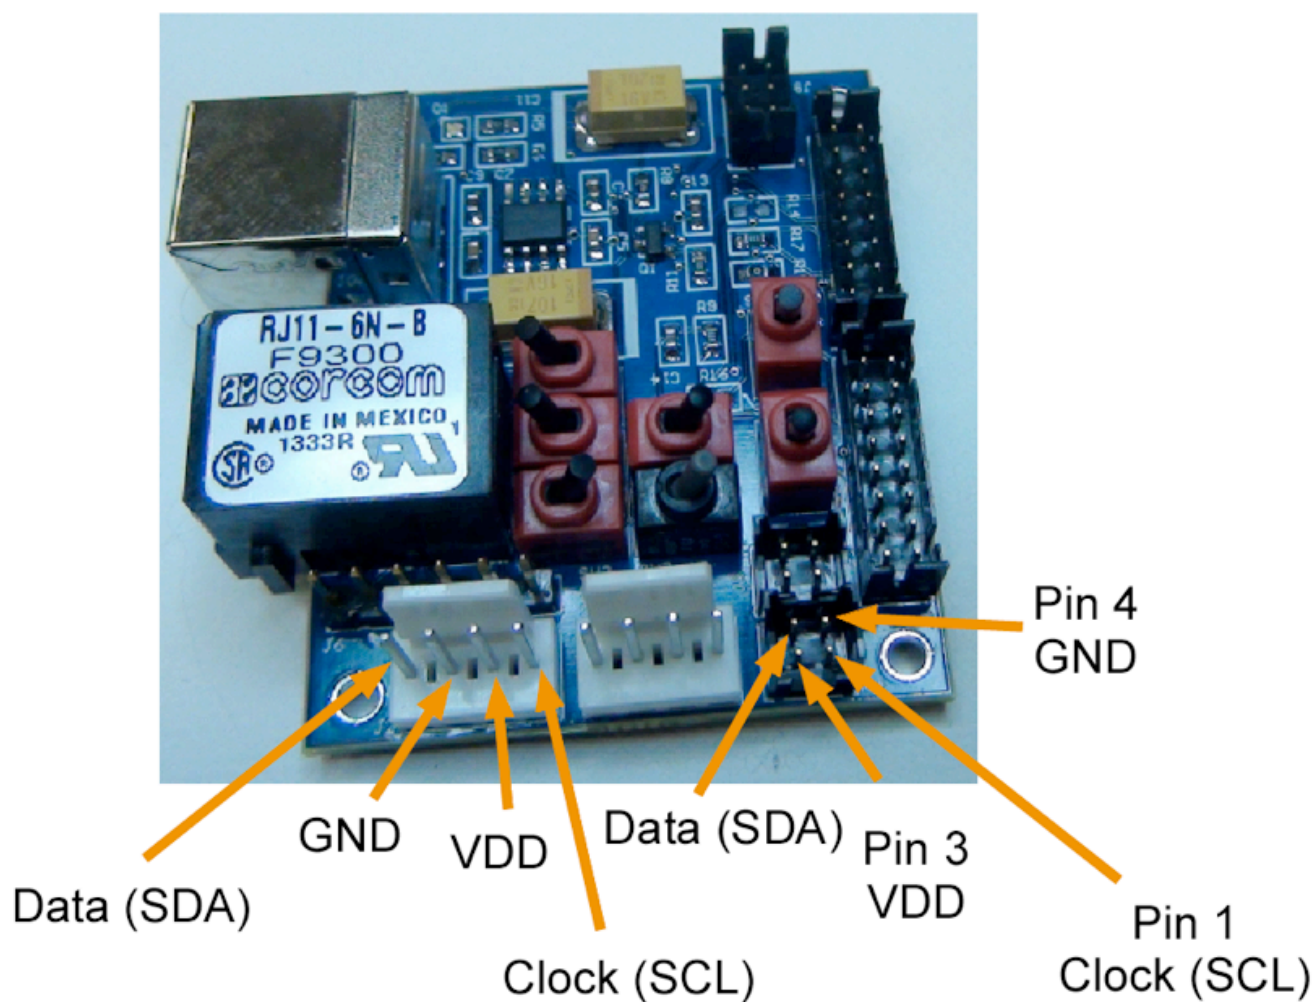


Figure 5 Pin description for I2C Bus Connectors.

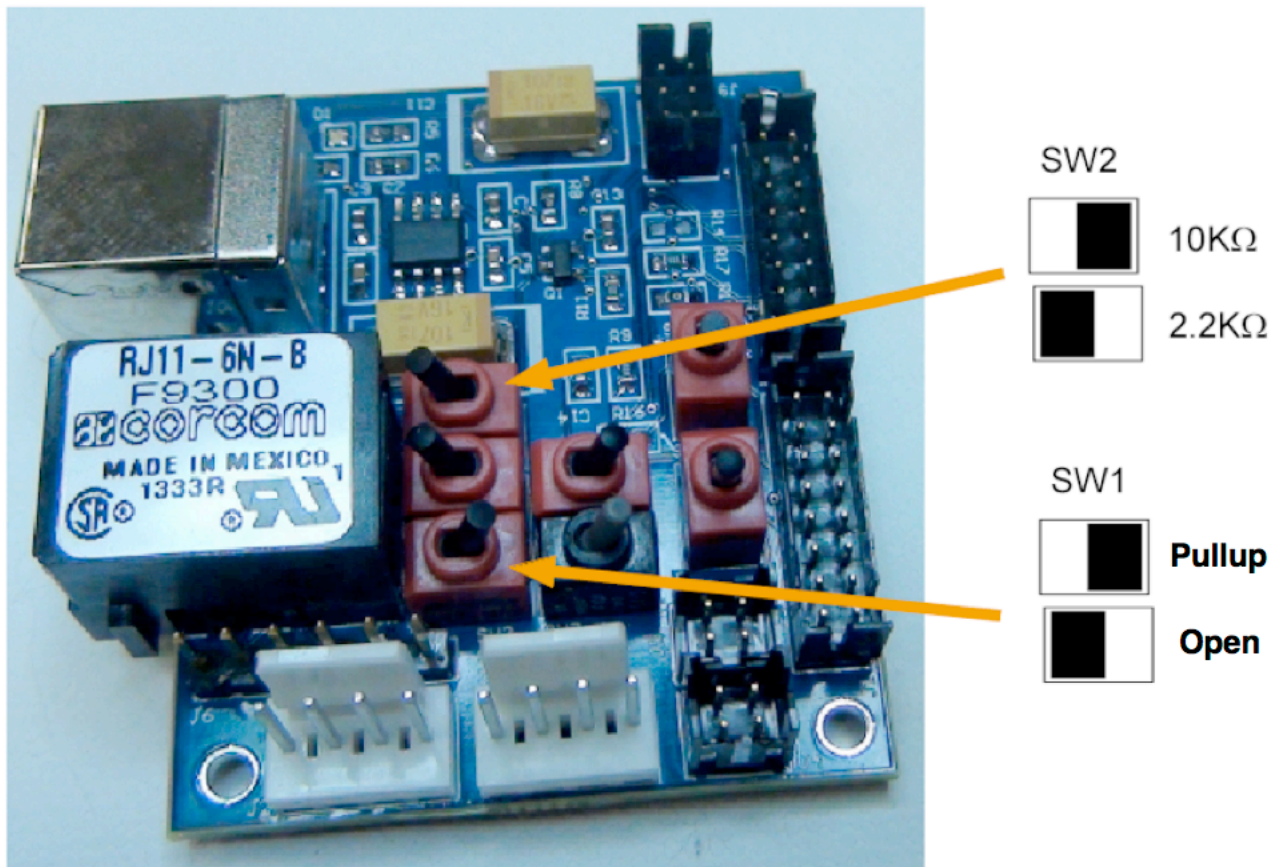


Figure 6 Switch settings for Pullup Resistor determination. Also whether a pullup resistor is used or it is open (in case Slave device has pullup resistors).

J4,J5

1	—	SCL
2	—	GROUND
3	—	VDD
4	—	SDA

Figure 7 4 Pin Hirose I2C Connection Pinout

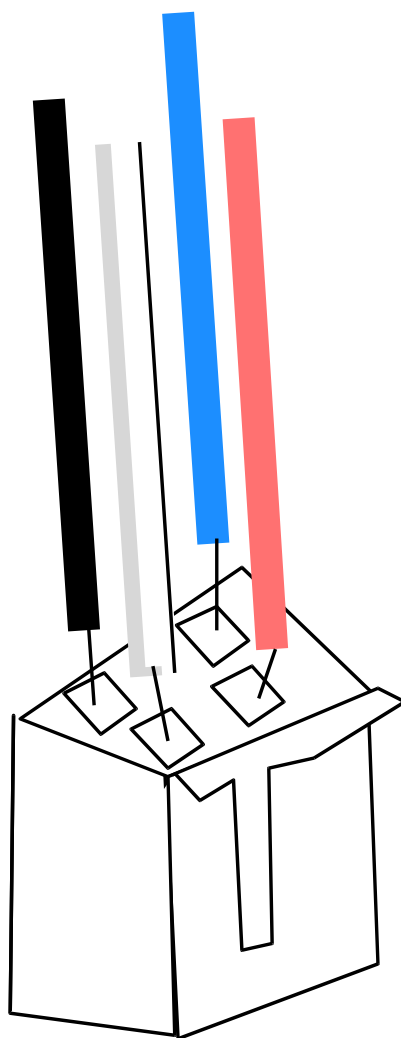


Figure 8 Cartoon showing 4 pin Hirose Female Connections. Note we use White wire for SDA and Blue for SCL. We suggest that this wiring color scheme be used when cabling I2C connections.

2.2 Pyraptor Java Application

The Java Pyraptor Application developed by IONOTRONICS provides for a graphical interface to write and read data to I2C devices and also SPI slaves. Figure 9 shows the Pyraptor Java Application used for I2C. In the Figure, a scan of I2C devices has been performed and two I2C slaves have been detected. By selecting individual I2C slaves, we can read and write to the device. The Pyraptor Java Application is launched through a console (Windows based or MSYS console). When using the Pyraptor Java Application, always monitor the console for messages. You should see the Pyraptor serial number and other information provided by the Diolan C API. IONOTRONICS has developed a Java Native Interface (JNI) to communicate with the Pyraptor using the Diolan C API. See Appendix A on how to install the Pyraptor Java Application.

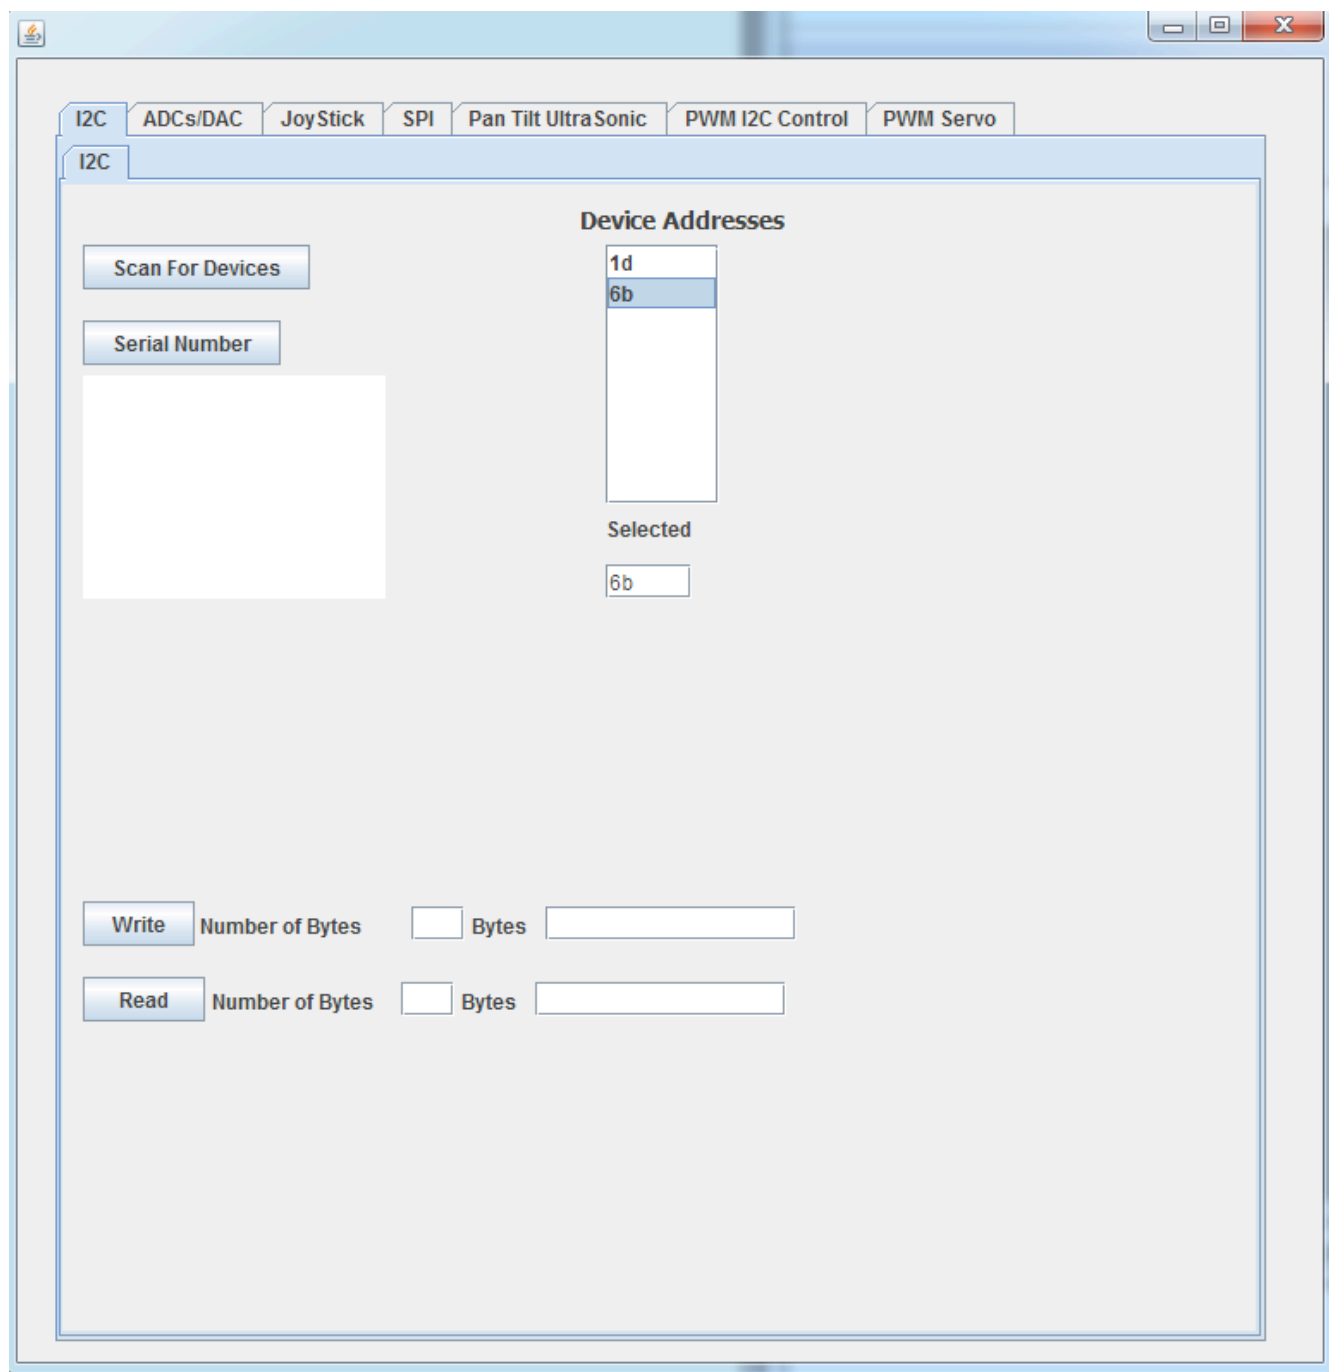


Figure 9 Java Application Scanning I2C Devices.

2.3 SPI Master Support

Pyroraptor supports a SPI Master with multiple SPI Selects (up to 5). Figure 10 shows the Hirose connectors used for SPI Master support. Figure 11 shows the IONOTRONICS Java Application with the SPI Tab active. An AtMEL SPI EEPROM Slave is connected and the manufacturers ID is read back. The default SPI Master clock is close to 1 MHz.

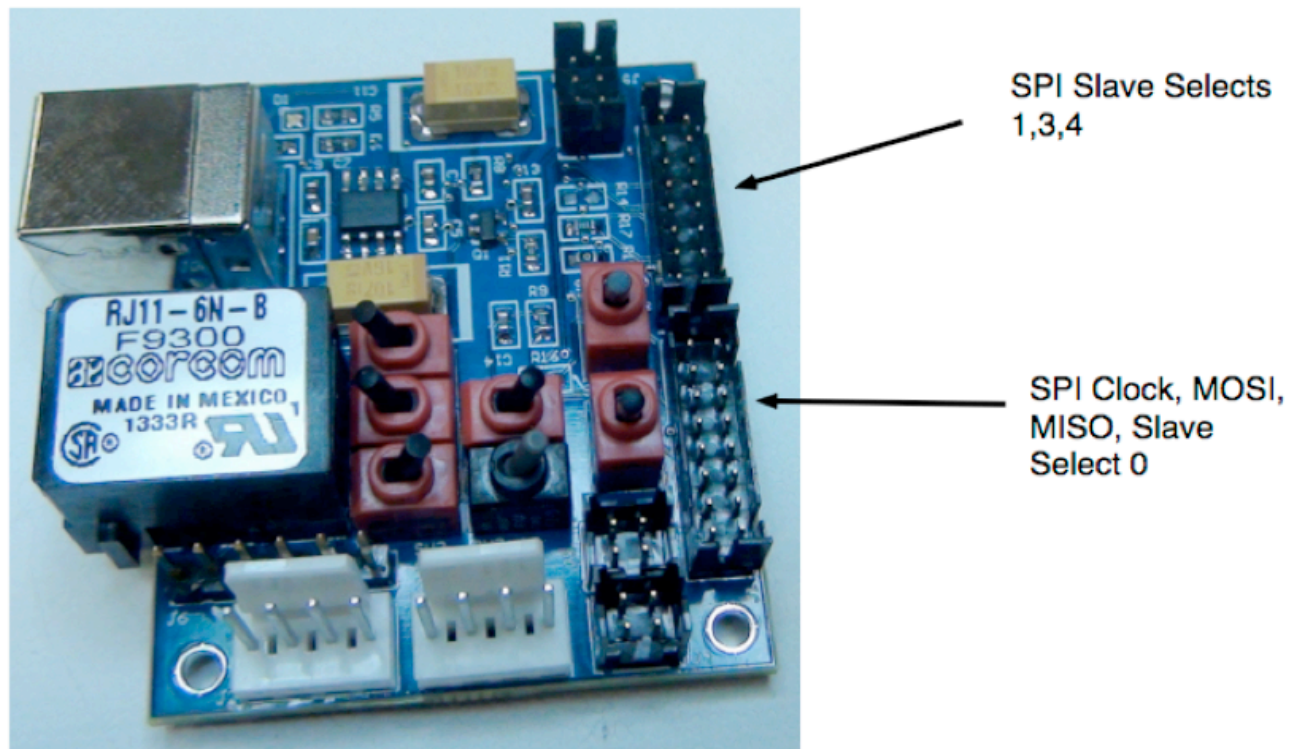


Figure 10 SPI Master Support with Multiple Slave Selects

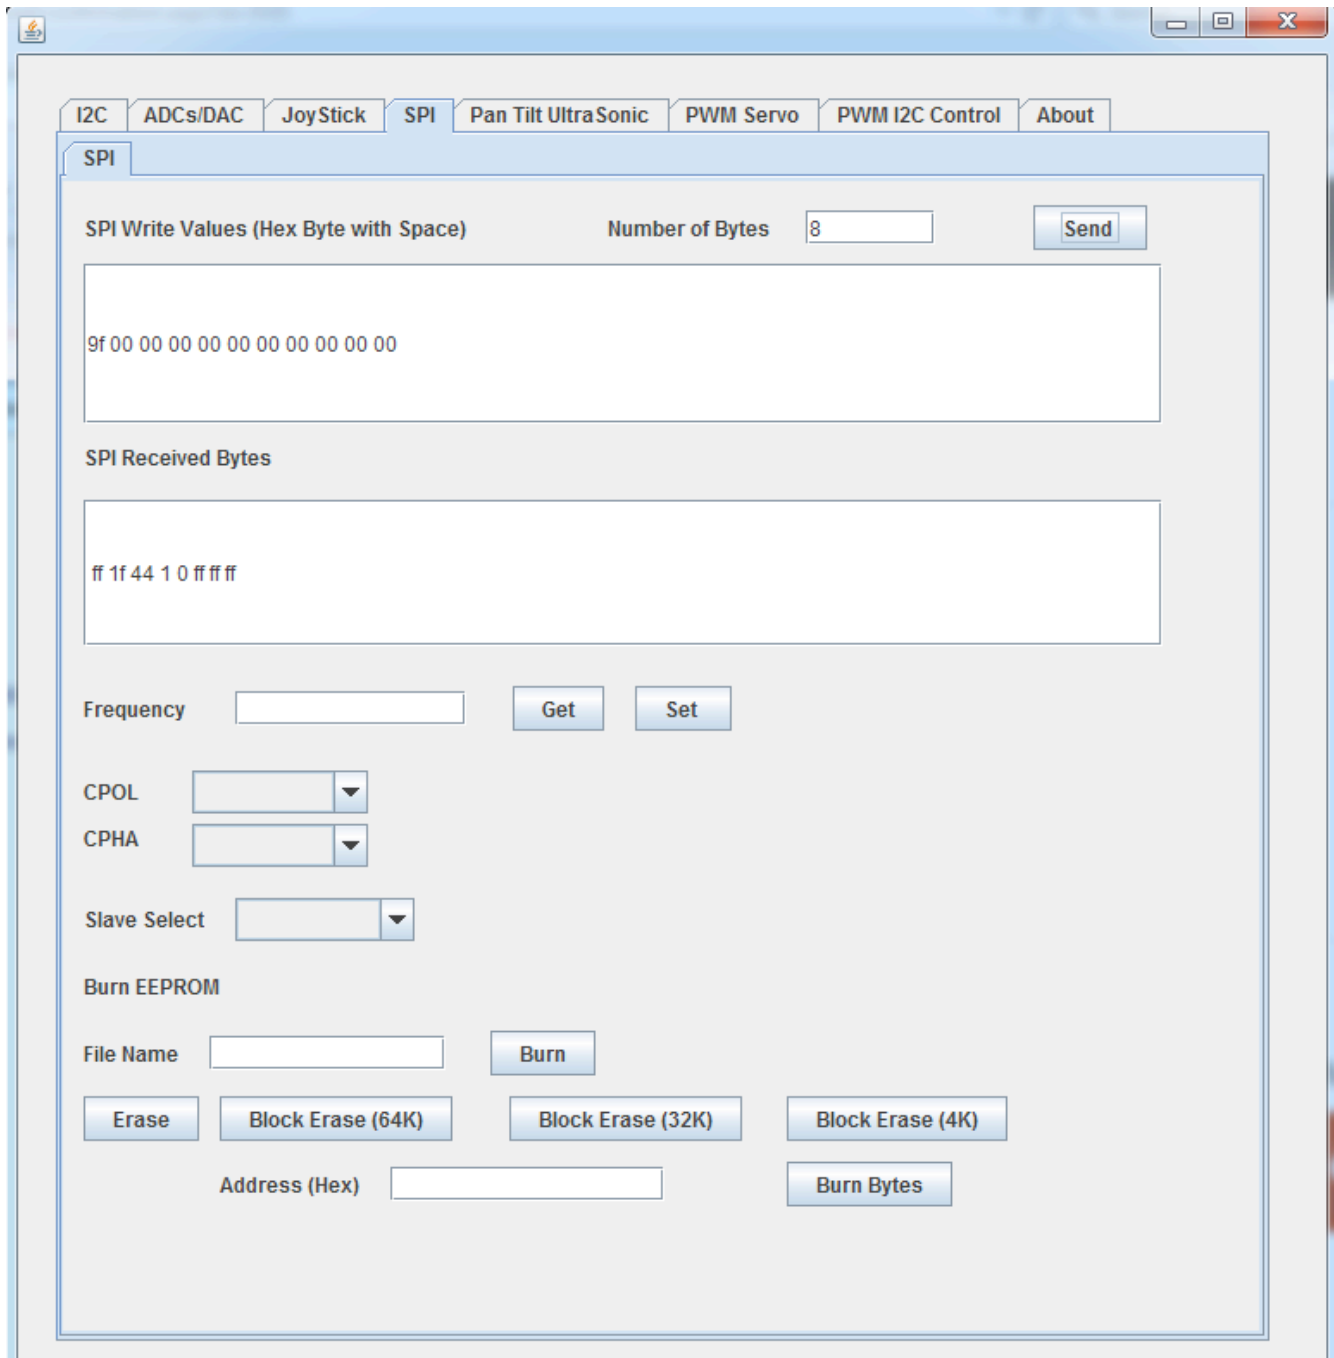


Figure 11 Java Application showing the SPI Tab in Action. Reading the manufacturing ID from an ATMEL SPI EEPROM.

Figure 12 shows the connections on the Pyroraptor. In Figure 13 we show the SPI signals with the slave selects.


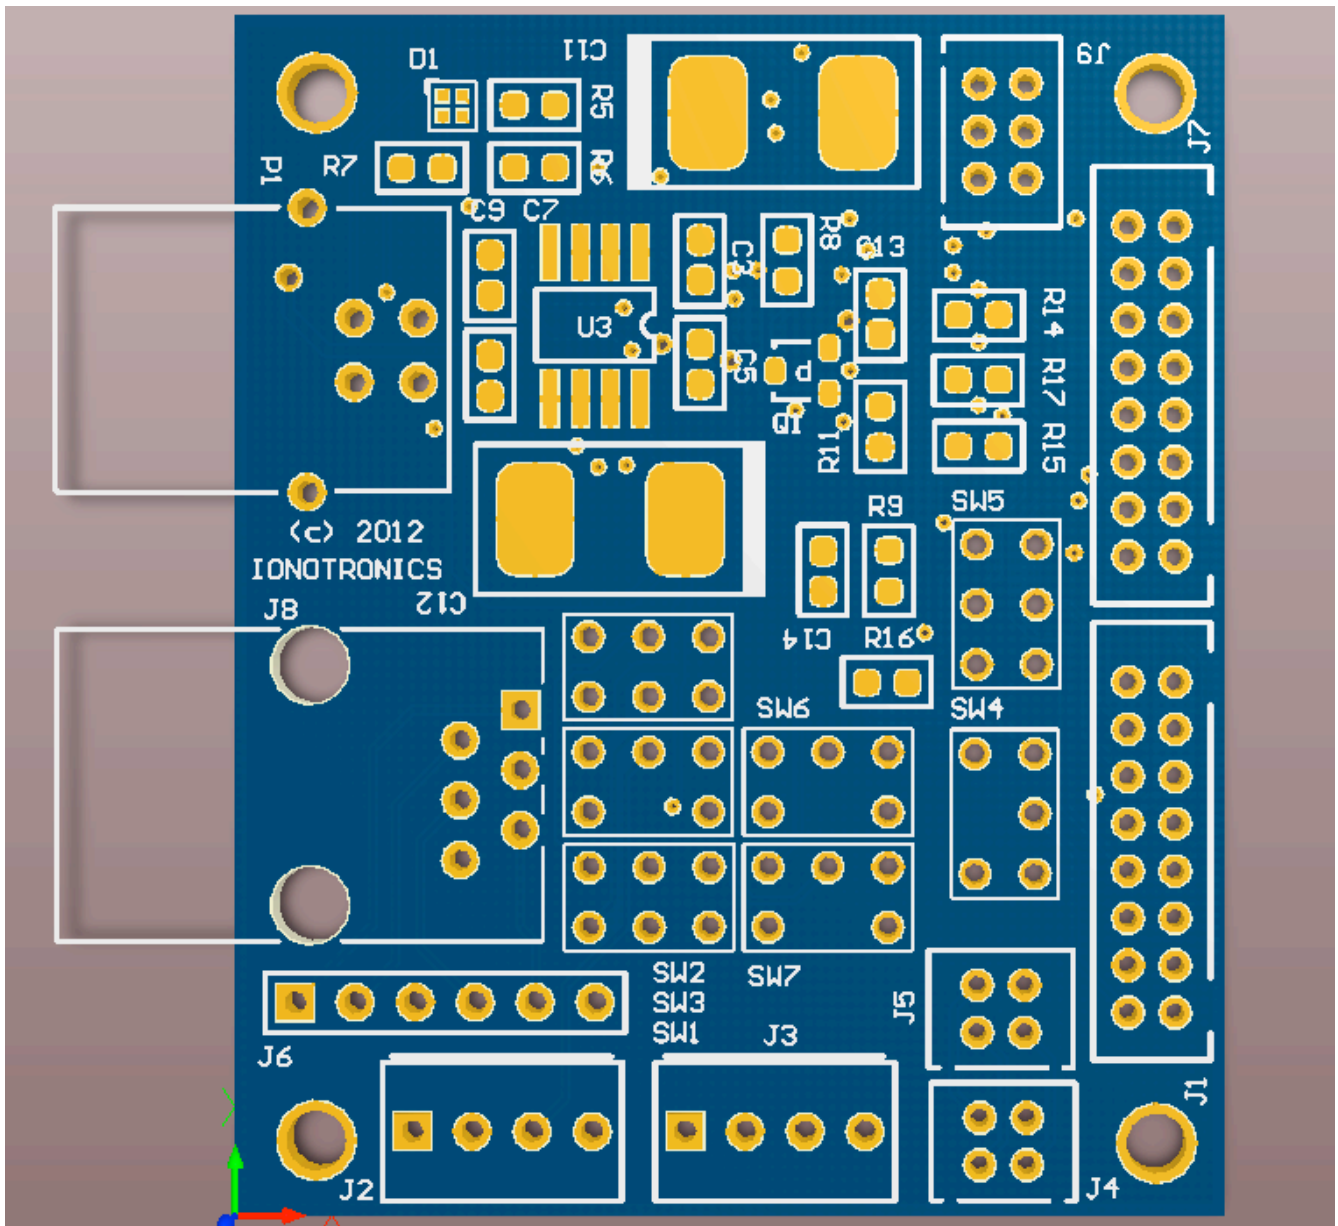


Figure 12 Pyroraaptor Connections, and Switches. SPI uses J1. More Slave Selects available on J7 and J9.

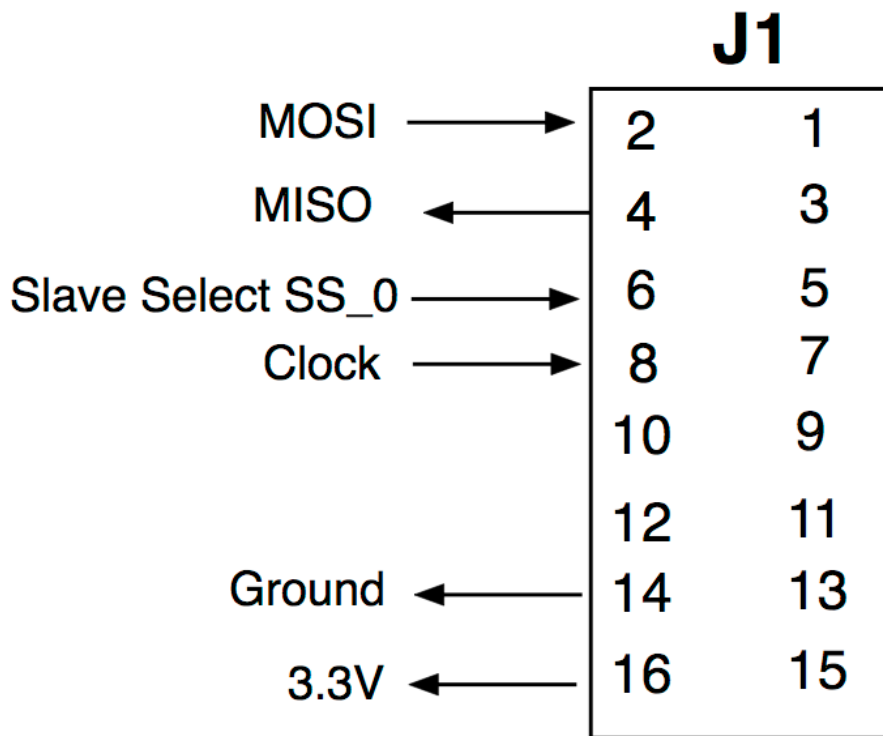

Note on Pin 16. Switch 4 sets to 3.3V or Open
(Depending if PIC Programmer not connected)

Figure 13 SPI Master Connections

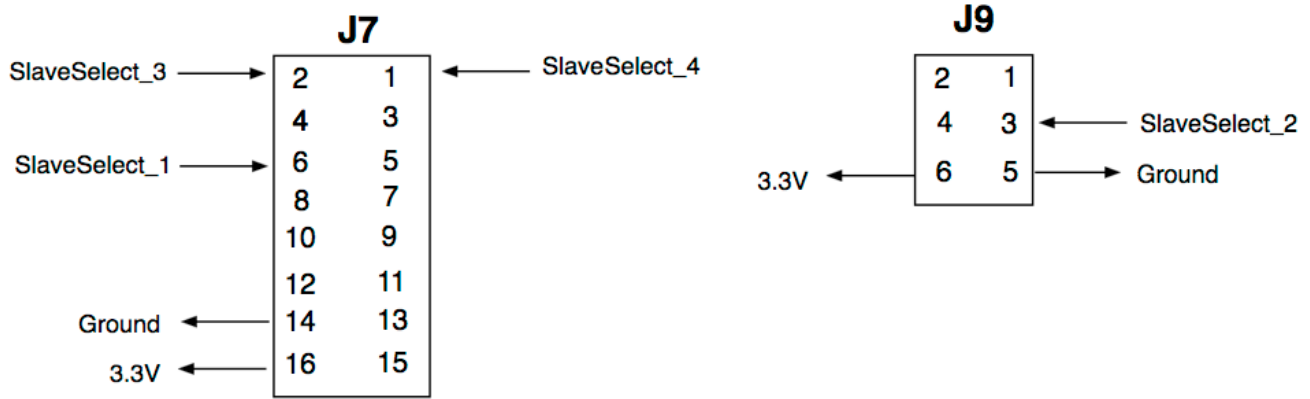


Figure 14 SPI Slave Selects

3 SPI Master/PIC Programming/SPI Firmware Download

The Pyroraaptor supports connections for programming IONOTRONIC Microchip PIC devices in a number of ways. It supports PIC programming RJ-11 to 6 pin 0.1" connection and the 16 pin Hirose connector. In addition, the Pyroraaptor SPI Master can be connected to devices (FPGA based embedded controllers for example) that support SPI Firmware Download.

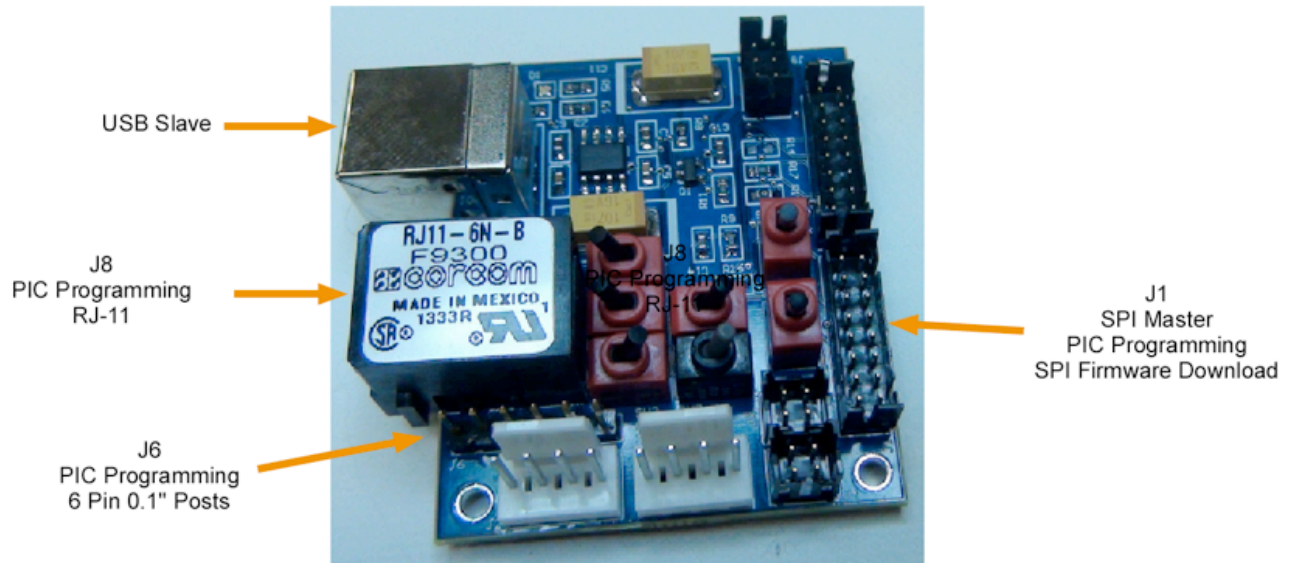


Figure 15 PIC Programming Conversion, SPI Firmware Download.

Figure 16 shows the connections for programming Micro Chip PIC Devices as well as devices that support Firmware Download through a SPI Slave Core. For example, FPGA's and ASICs.

Pins 2,4,6 and 8 are used to connect the Pyraptor to a SPI Slave. For example a SPI EEPROM. Pin 7 is used for the MUX select on the Eoraptor (MK-39019) so that a SPI EEPROM can be read by an embedded process (e.g. PIC) or is programmed through pins 2,4,6, and 8.

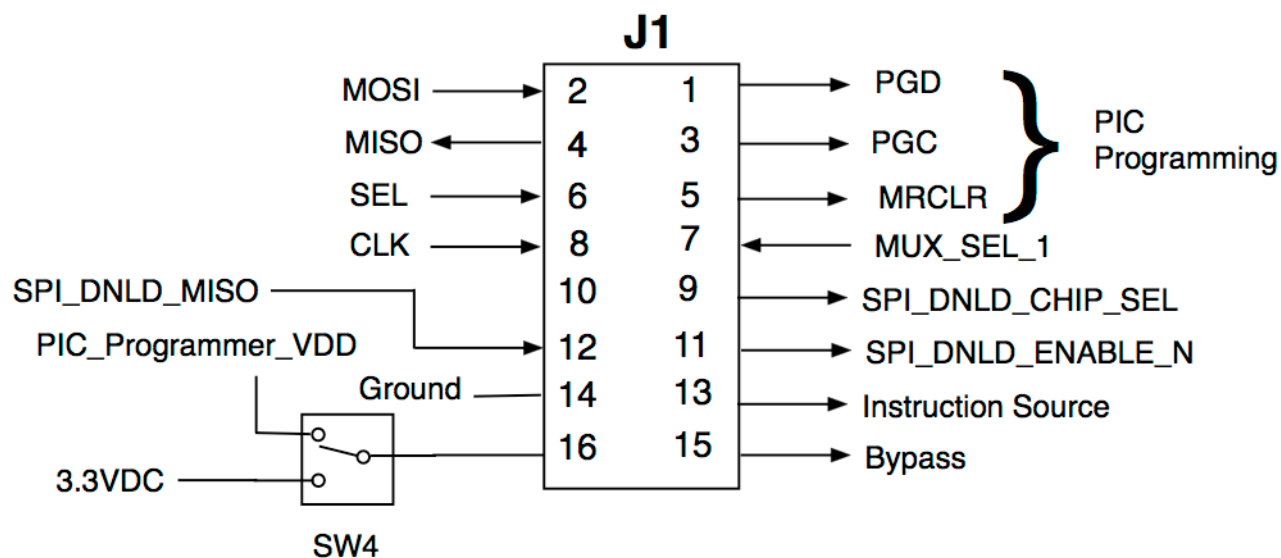


Figure 16 Programming Connections

The signals SPI_DNLD_CHIP_SEL, SPI_DNLD_MISO and MOSE (Pin 2) and CLK(Pin 8) are used to interface to a SPI slave on an FPGA or ASIC. Note in this case a separate MISO is used since in the case of an FPGA or ASIC tri-state may or may not be supported. Pin 11, 13 and 15 are GPIO used for handshake and control.

4 Pyroraptor Applications in Robotics

4.1 Rover


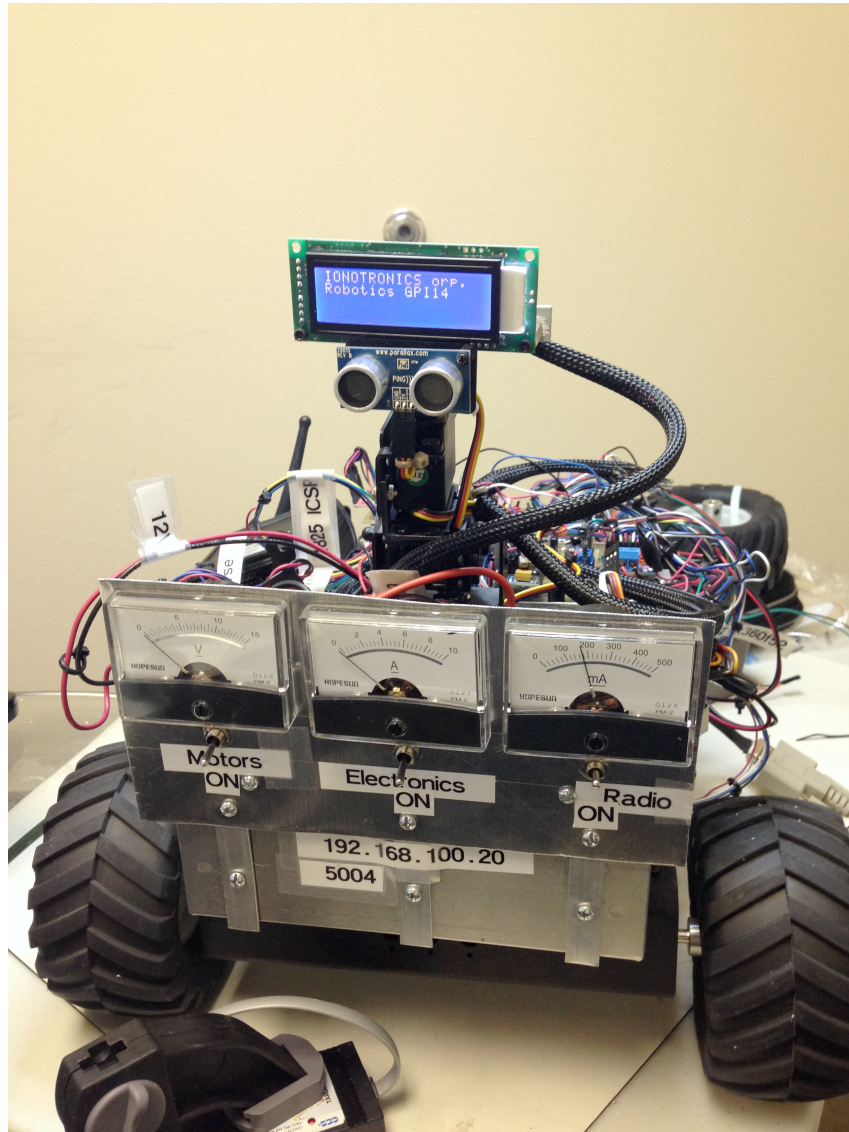


Figure 17 Rover with I2C Sensors and Servo Control

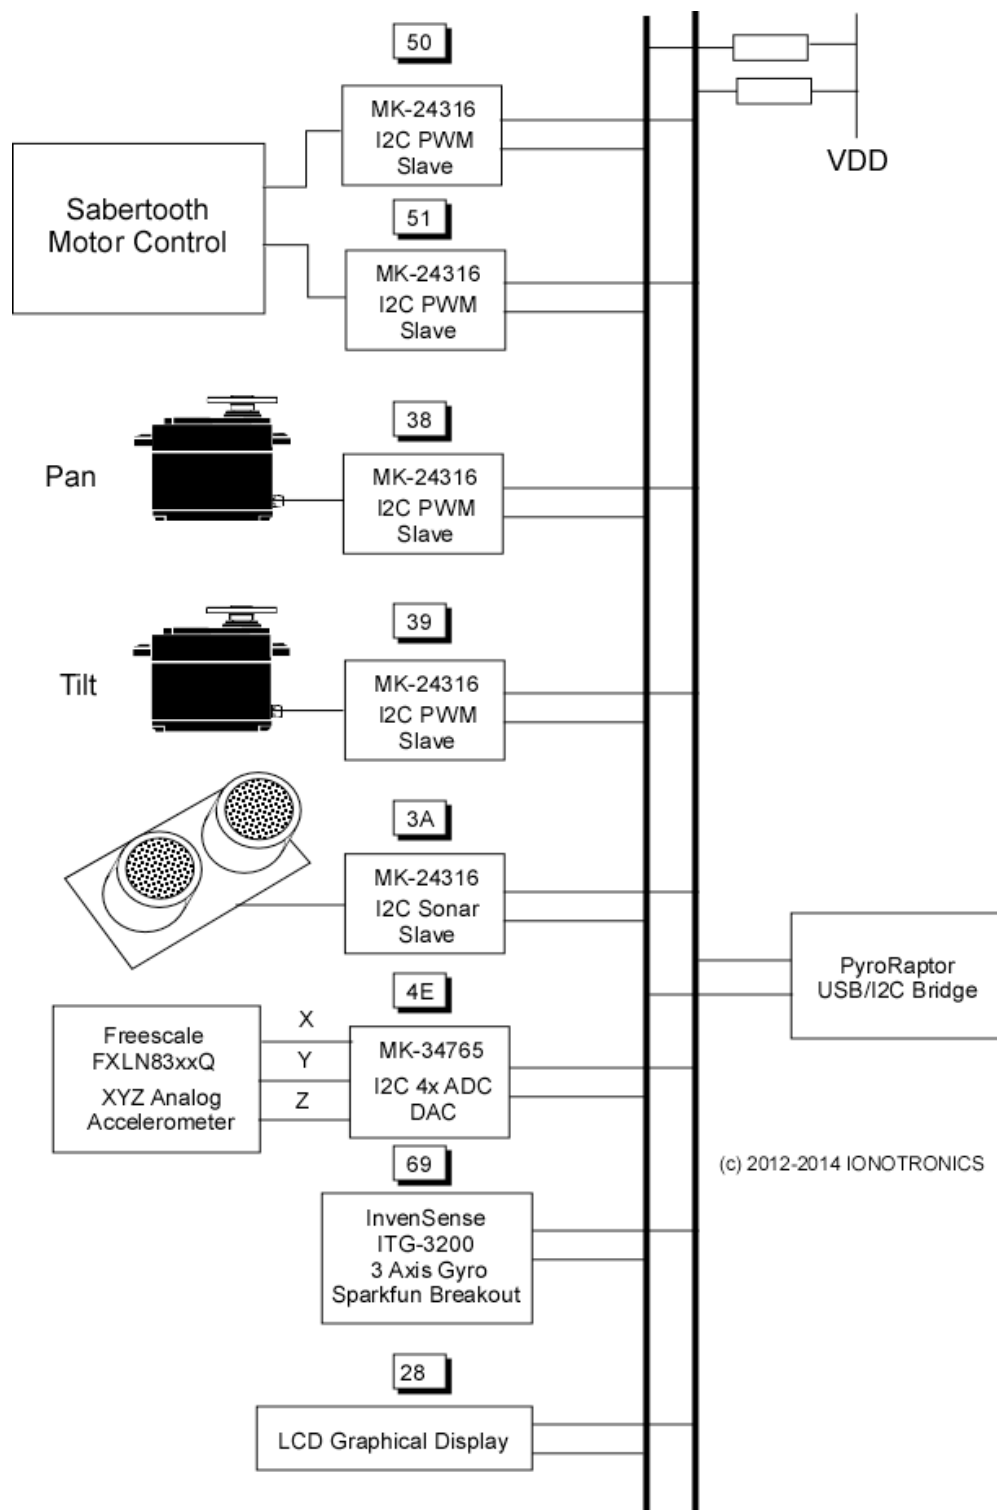

(c) 2012-2014 IONOTRONICS

Figure 18 Rover I2C Devices with Device Addresses

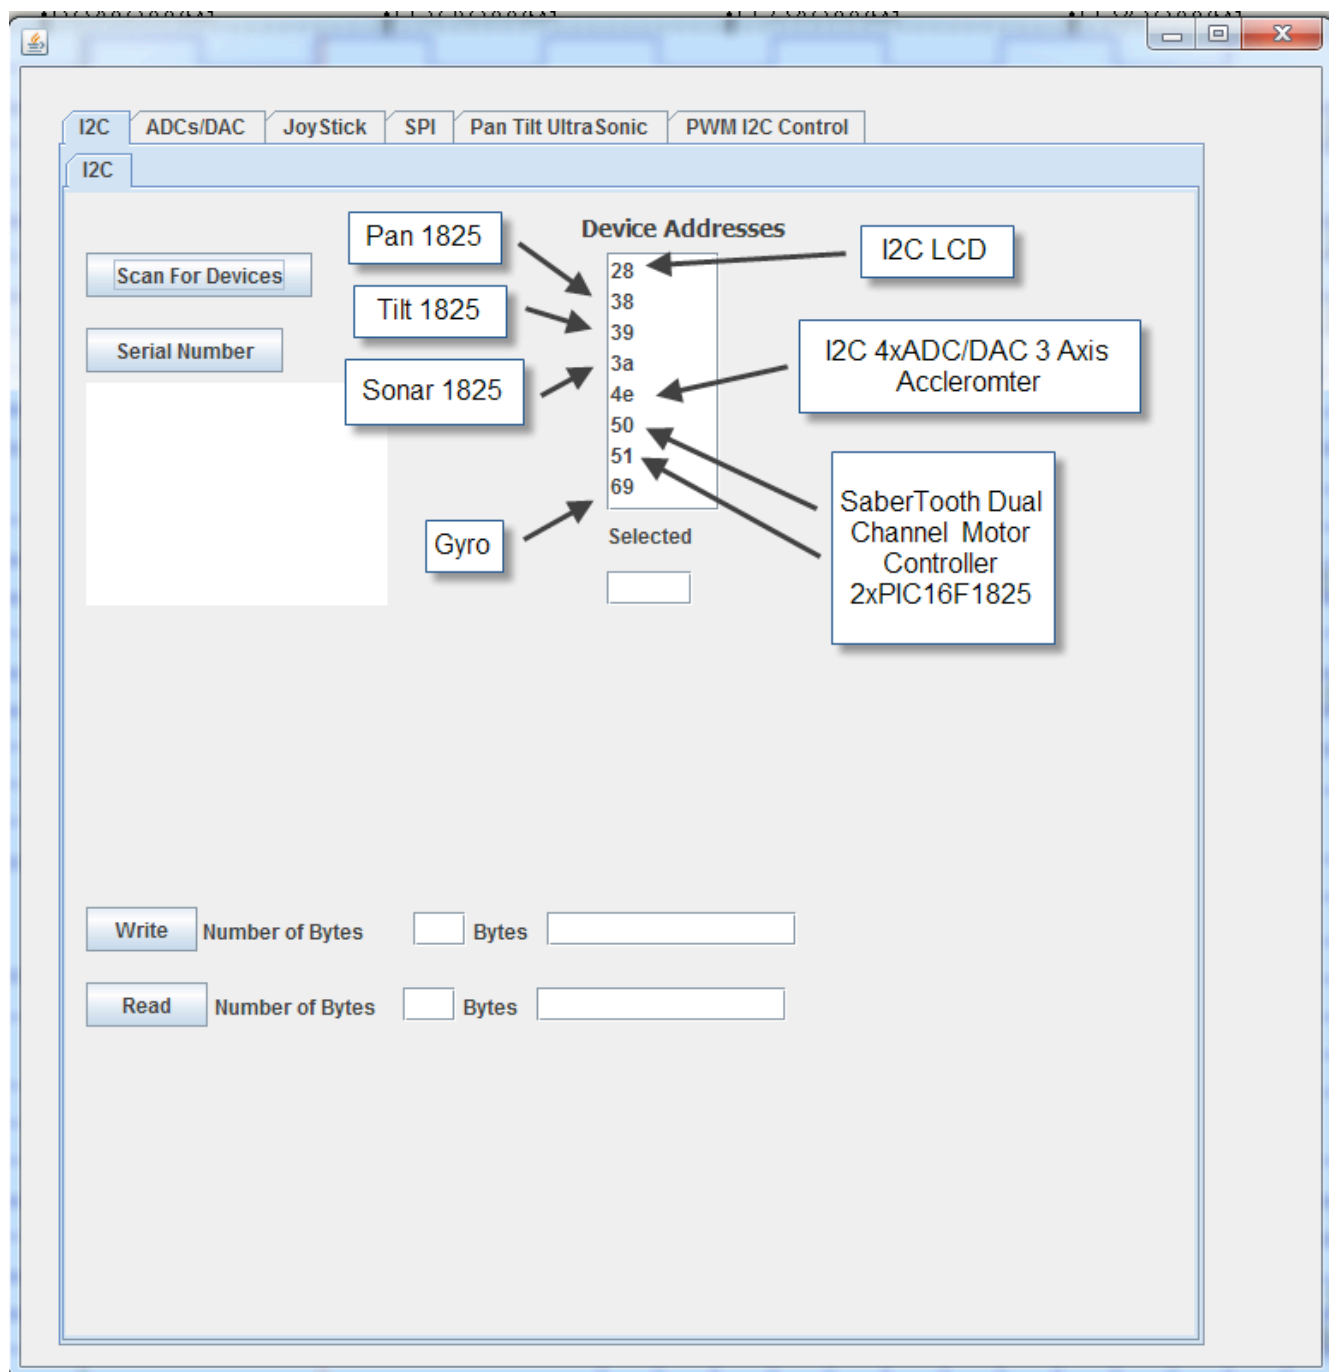


Figure 19 IONOTRONICS Java Application Showing I2C Bus Scan of Rover Through Pyraptor

4.2 Example Setting Up the Pololu Accelerometer/Gyro/Compass I2c Device

Figure 20 shows the Pyraptor interfaced to the Pololu MinIMU-9 v3 Gyro, Accelerometer, and Compass. The device has

two I2C devices. The Figure shows the connections to the 4-pin Hirose I2C connector. The wires are connected to the Pololu devices using 0.1" connector.

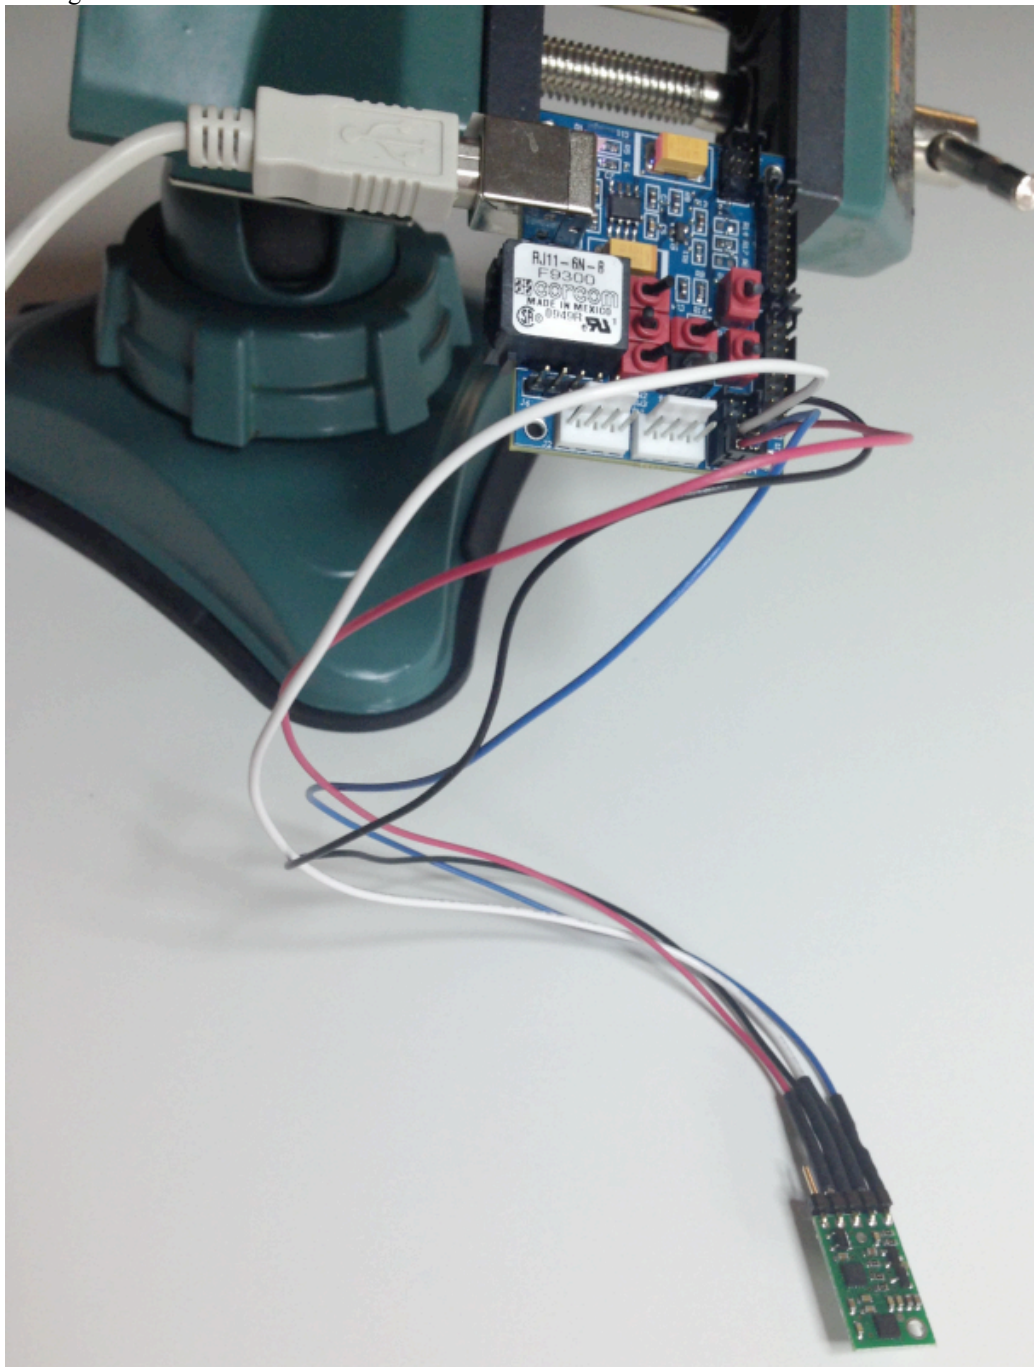


Figure 20 Pyroraaptor Intefaced to Pololu MinIMU-9 Gyro, Accelerometer, and Compass

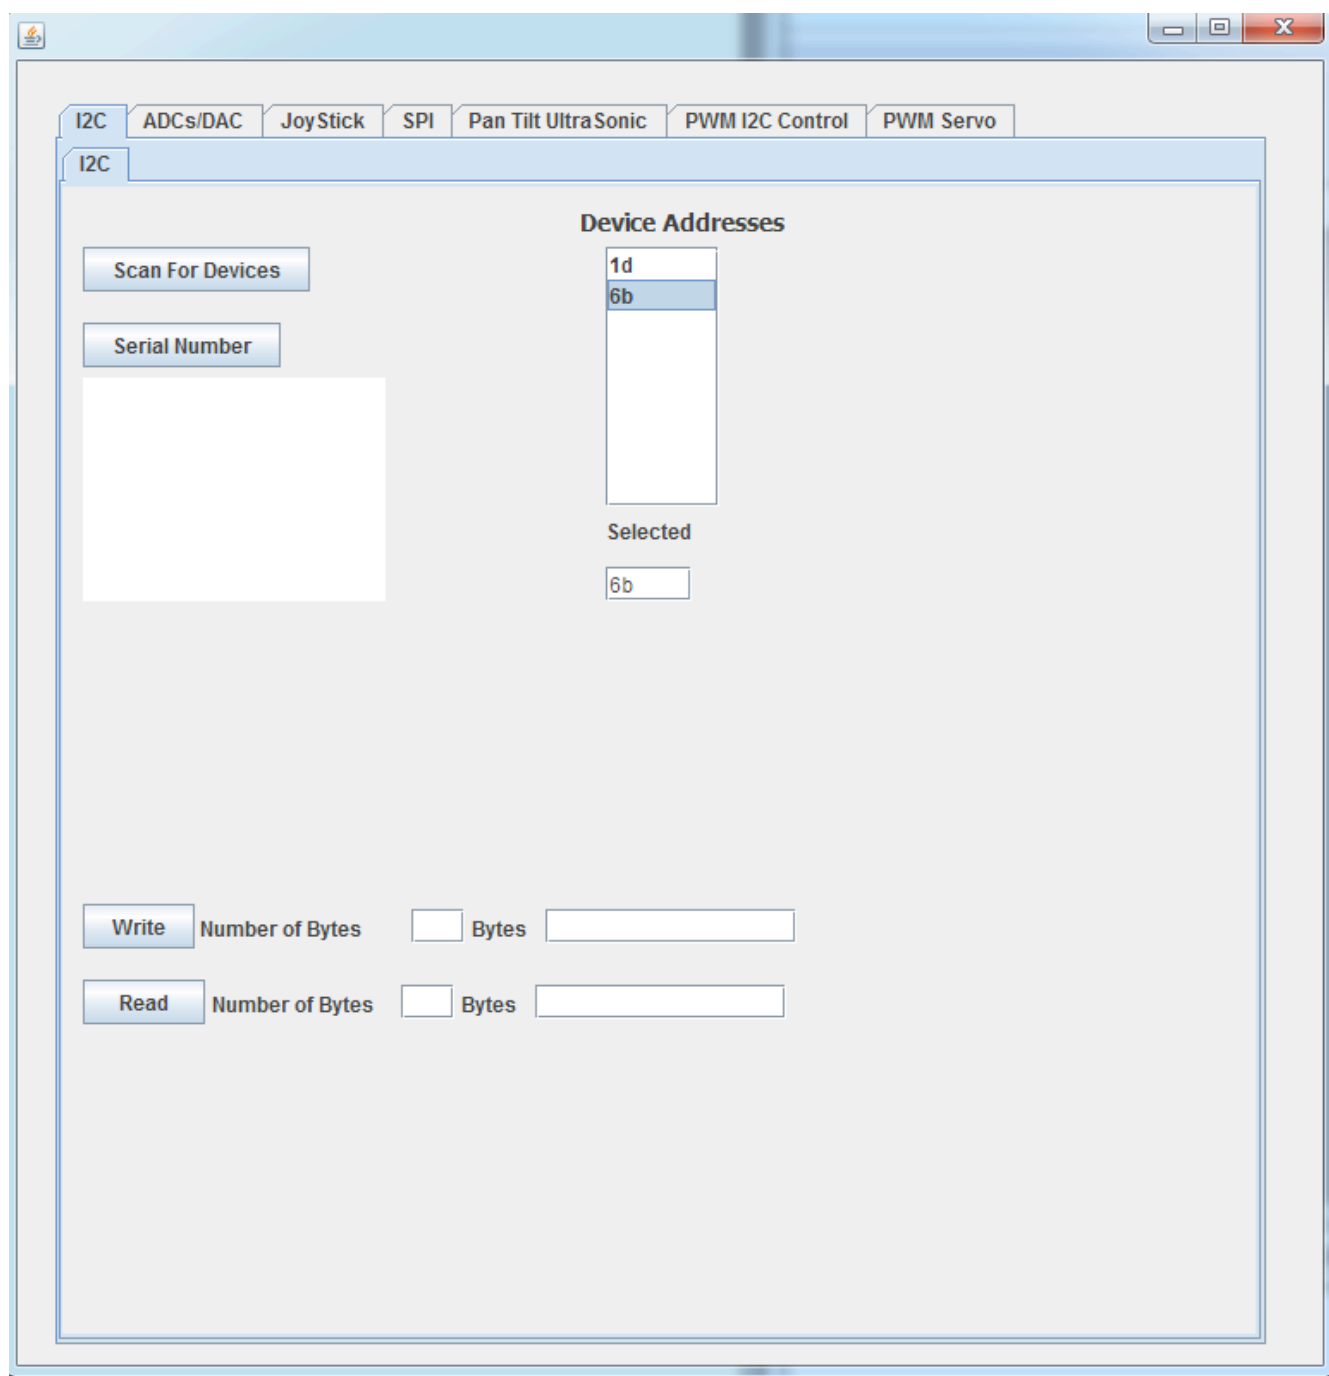


Figure 21 Java Application Scan of Pololu Device

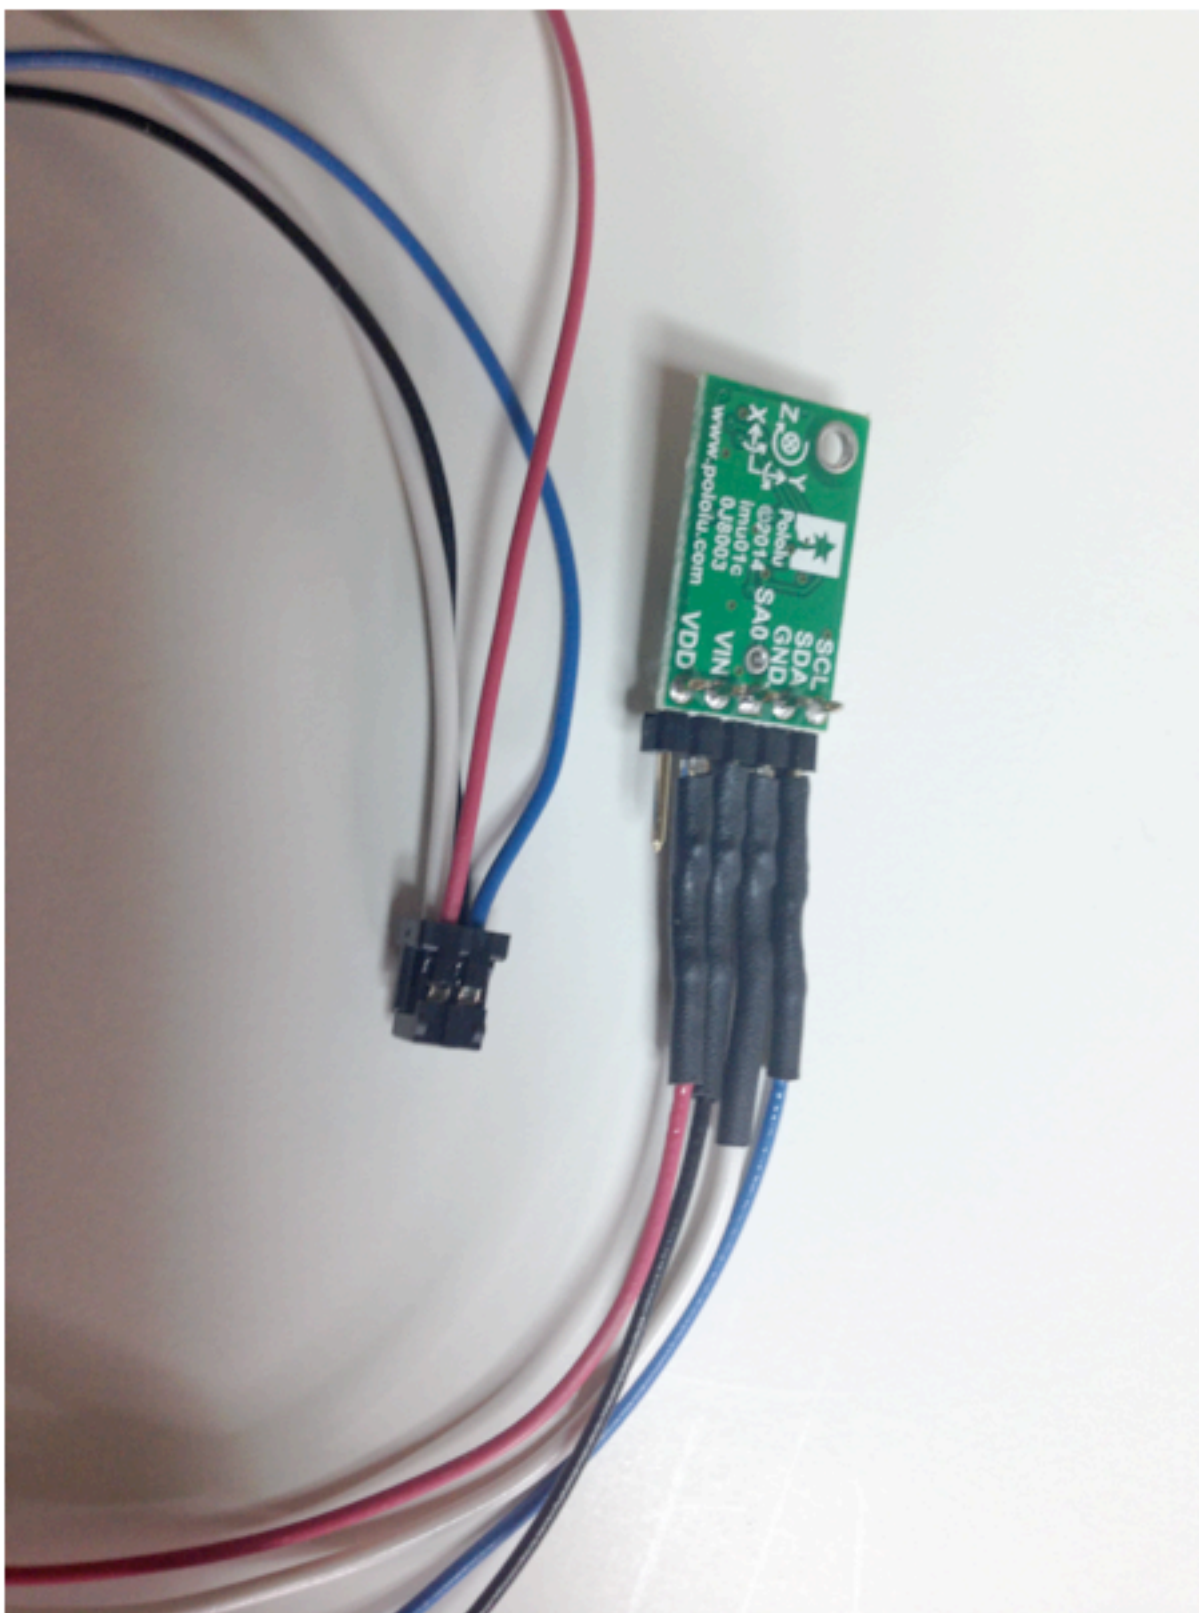


Figure 22 Close up of Cabling to Polou Device

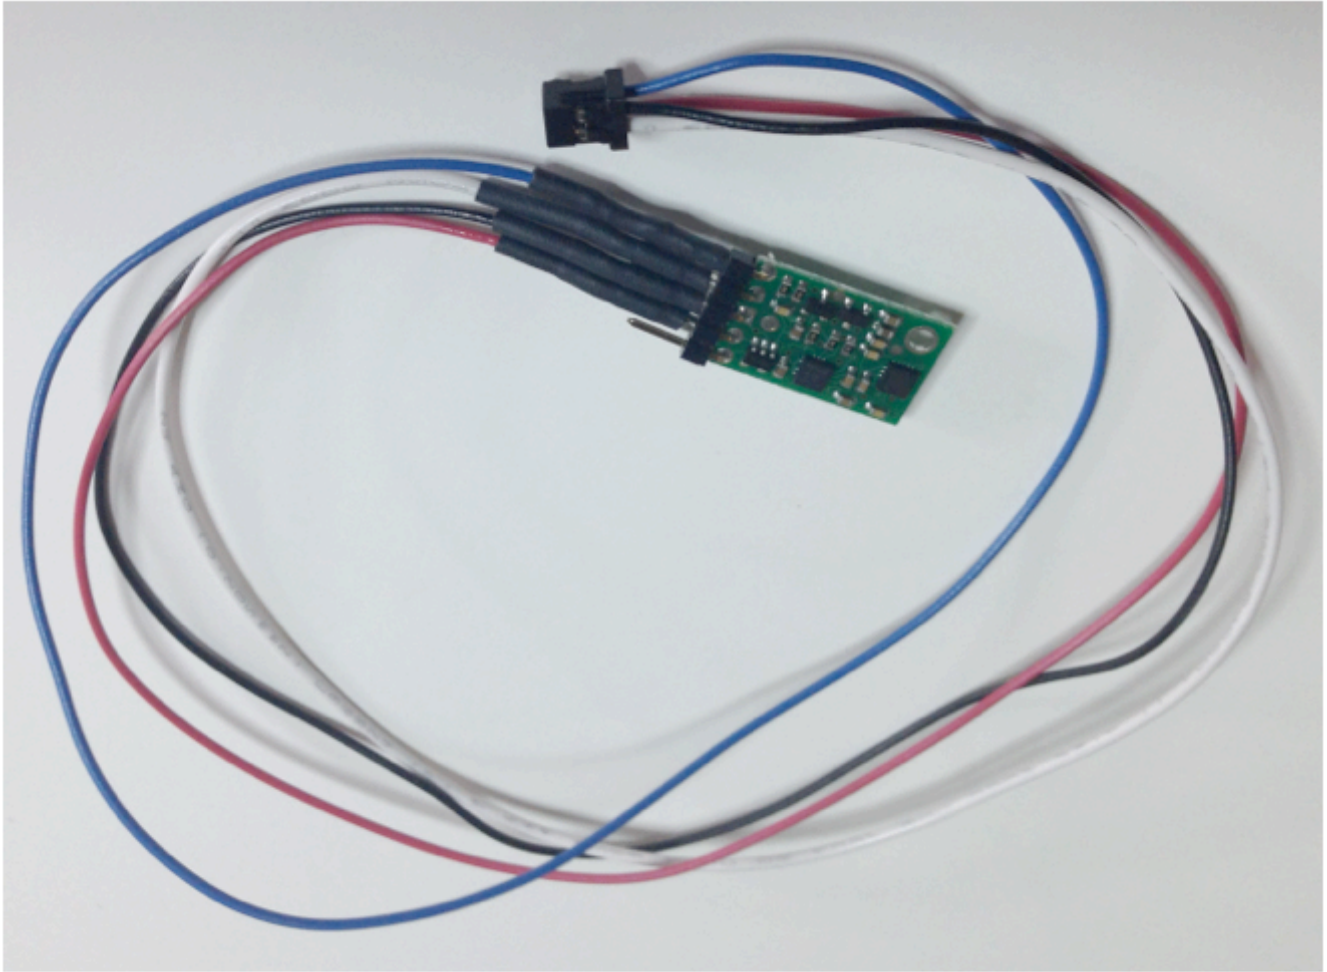


Figure 23 Close up of Cabling to Pololu Device

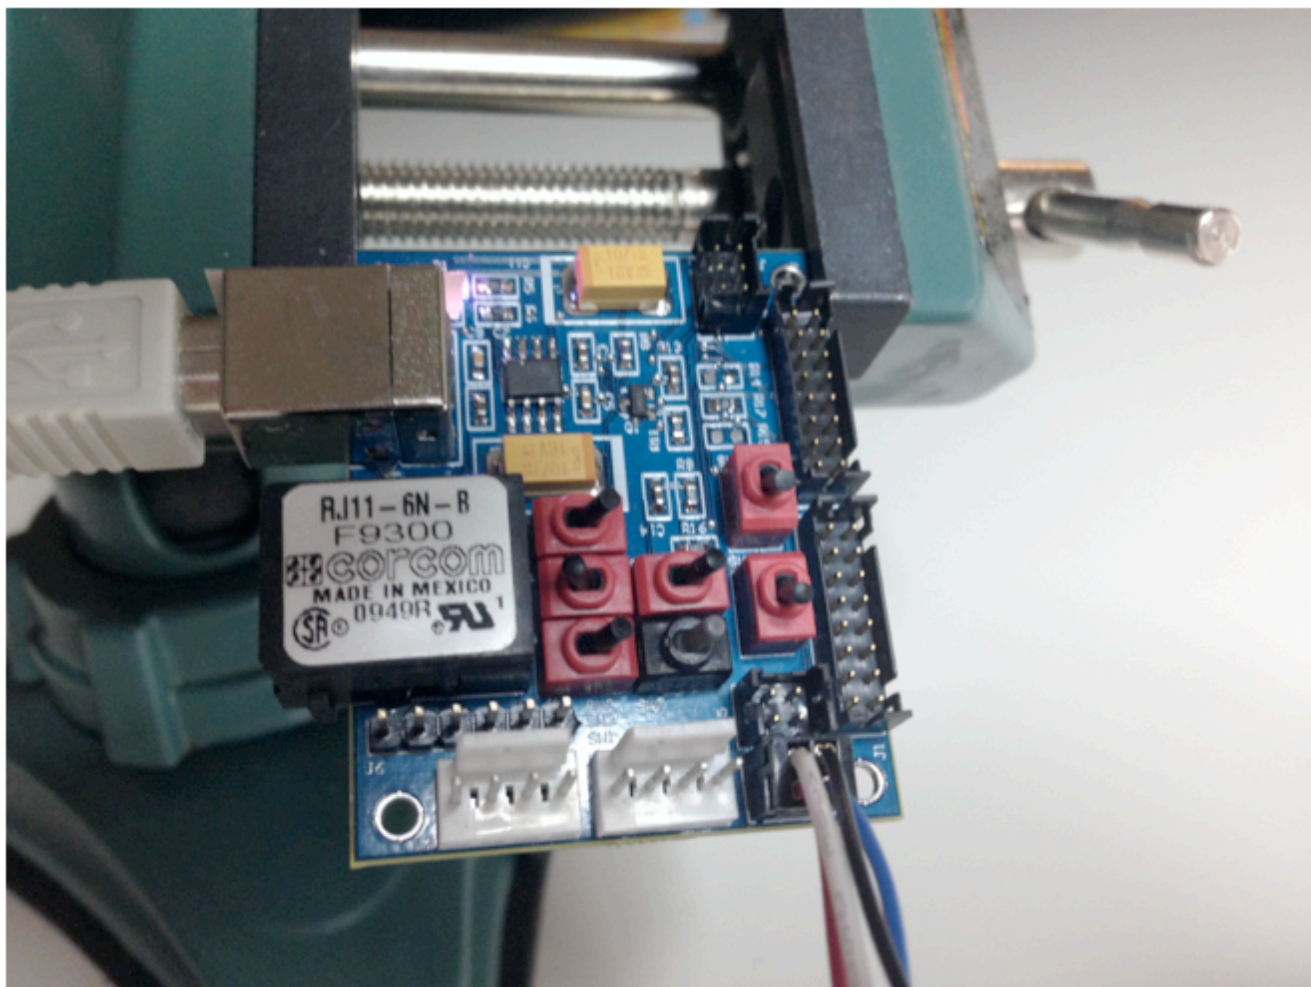


Figure 24 Using Harbor Freight Vise to Secure Pyroraptor

5 Appendix A: PyroRaptor Java Application Installation

The Java Application tool provides a graphical interface for SPI and I2C. Download it from the IONOTRONICS Web Site.

Unzip it in a directory. To run just type:

xstart.bat

from a DOS prompt.

Before using the tool you need to download and install the:

Microsoft Visual C++ 2010 Redistributable Package (x86)

At:

<http://www.microsoft.com/en-us/download/confirmation.aspx?id=5555>

This is normal for applications that use VC++.

Also download the latest Java JRE. Google it. Get it from the Oracle site.

You must use the 32 bit version of Java. You can have the 64 bit version installed but make sure to run the 32 bit version of java.

We highly recommend the MSYS command line tool so that you can use UNIX commands. For example, to get the present directory you type 'pwd'. Or to see what Java you are running you can type 'which java'. You can download MSYS from the IONOTRONICS WEB Site. To run xstart.bat type './xstart.bat'.

6 Appendix Hirose DF11 Series Connectors

Figure 11 shows a 12 pin Hirose DF11 Series connector. This is useful when building cabling systems. Note pin 1 marker and numbering scheme.

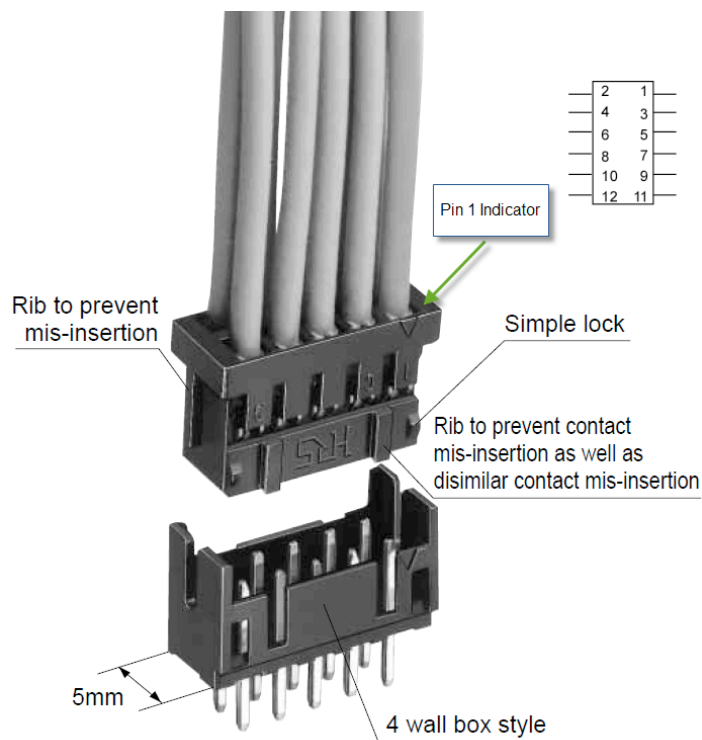


Figure 25 Guide to the Hirose DF11 series connector

7 GNU Free Documentation License

Version 1.3, 3 November 2008

Copyright © 2000, 2001, 2002, 2007, 2008 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

0. PREAMBLE

The purpose of this License is to make a manual, textbook, or other functional and useful document "free" in the sense of freedom: to assure everyone the effective freedom to copy and redistribute it, with or without modifying it, either commercially or noncommercially. Secondly, this License preserves for the author and publisher a way to get credit for their work, while not being considered responsible for modifications made by others.

This License is a kind of "copyleft", which means that derivative works of the document must themselves be free in the same sense. It complements the GNU General Public License, which is a copyleft license designed for free software.

We have designed this License in order to use it for manuals for free software, because free software needs free documentation: a free program should come with manuals providing the same freedoms that the software does. But this License is not limited to software manuals; it can be used for any textual work, regardless of subject matter or whether it is published as a printed book. We recommend this License principally for works whose purpose is instruction or reference.

1. APPLICABILITY AND DEFINITIONS

This License applies to any manual or other work, in any medium, that contains a notice placed by the copyright holder saying it can be distributed under the terms of this License. Such a notice grants a world-wide, royalty-free license, unlimited in duration, to use that work under the conditions stated herein. The "Document", below, refers to any such manual or work. Any member of the public is a licensee, and is addressed as "you". You accept the license if you copy, modify or distribute the work in a way requiring permission under copyright law.

A "Modified Version" of the Document means any work containing the Document or a portion of it, either copied verbatim, or with modifications and/or translated into another language.

A "Secondary Section" is a named appendix or a front-matter section of the Document that deals exclusively with the relationship of the publishers or authors of the Document to the Document's overall subject (or to related matters) and contains nothing that could fall directly within that overall subject. (Thus, if the Document is in part a textbook of mathematics, a Secondary Section may not explain any mathematics.) The relationship could be a matter of historical connection with the subject or with related matters, or of legal, commercial, philosophical, ethical or political position regarding them.

The "Invariant Sections" are certain Secondary Sections whose titles are designated, as being those of Invariant Sections, in the notice that says that the Document is released under this License. If a section does not fit the above definition of Secondary then it is not allowed to be designated as Invariant. The Document may contain zero Invariant Sections. If the Document does not identify any Invariant Sections then there are none.

The "Cover Texts" are certain short passages of text that are listed, as Front-Cover Texts or Back-Cover Texts, in the notice that says that the Document is released under this License. A Front-Cover Text may be at most 5 words, and a Back-Cover Text may be at most 25 words.

A "Transparent" copy of the Document means a machine-readable copy, represented in a format whose specification is available to the general public, that is suitable for revising the document straightforwardly with generic text editors or (for images composed of pixels) generic paint programs or (for drawings) some widely available drawing editor, and that is suitable for input to text formatters or for automatic translation to a variety of formats suitable for input to text formatters. A copy made in an otherwise Transparent file format whose markup, or absence of markup, has been arranged to thwart or discourage subsequent modification by readers is not Transparent. An image format is not Transparent if used for any

substantial amount of text. A copy that is not "Transparent" is called "Opaque".

Examples of suitable formats for Transparent copies include plain ASCII without markup, Texinfo input format, LaTeX input format, SGML or XML using a publicly available DTD, and standard-conforming simple HTML, PostScript or PDF designed for human modification. Examples of transparent image formats include PNG, XCF and JPG. Opaque formats include proprietary formats that can be read and edited only by proprietary word processors, SGML or XML for which the DTD and/or processing tools are not generally available, and the machine-generated HTML, PostScript or PDF produced by some word processors for output purposes only.

The "Title Page" means, for a printed book, the title page itself, plus such following pages as are needed to hold, legibly, the material this License requires to appear in the title page. For works in formats which do not have any title page as such, "Title Page" means the text near the most prominent appearance of the work's title, preceding the beginning of the body of the text.

The "publisher" means any person or entity that distributes copies of the Document to the public.

A section "Entitled XYZ" means a named subunit of the Document whose title either is precisely XYZ or contains XYZ in parentheses following text that translates XYZ in another language. (Here XYZ stands for a specific section name mentioned below, such as "Acknowledgements", "Dedications", "Endorsements", or "History".) To "Preserve the Title" of such a section when you modify the Document means that it remains a section "Entitled XYZ" according to this definition.

The Document may include Warranty Disclaimers next to the notice which states that this License applies to the Document. These Warranty Disclaimers are considered to be included by reference in this License, but only as regards disclaiming warranties: any other implication that these Warranty Disclaimers may have is void and has no effect on the meaning of this License.

2. VERBATIM COPYING

You may copy and distribute the Document in any medium, either commercially or noncommercially, provided that this License, the copyright notices, and the license notice saying this License applies to the Document are reproduced in all copies, and that you add no other conditions whatsoever to those of this License. You may not use technical measures to obstruct or control the reading or further copying of the copies you make or distribute. However, you may accept compensation in exchange for copies. If you distribute a large enough number of copies you must also follow the conditions in section 3.

You may also lend copies, under the same conditions stated above, and you may publicly display copies.

3. COPYING IN QUANTITY

If you publish printed copies (or copies in media that commonly have printed covers) of the Document, numbering more than 100, and the Document's license notice requires Cover Texts, you must enclose the copies in covers that carry, clearly and legibly, all these Cover Texts: Front-Cover Texts on the front cover, and Back-Cover Texts on the back cover. Both covers must also clearly and legibly identify you as the publisher of these copies. The front cover must present the full title with all words of the title equally prominent and visible. You may add other material on the covers in addition. Copying with changes limited to the covers, as long as they preserve the title of the Document and satisfy these conditions, can be treated as verbatim copying in other respects.

If the required texts for either cover are too voluminous to fit legibly, you should put the first ones listed (as many as fit reasonably) on the actual cover, and continue the rest onto adjacent pages.

If you publish or distribute Opaque copies of the Document numbering more than 100, you must either include a machine-readable Transparent copy along with each Opaque copy, or state in or with each Opaque copy a computer-network location from which the general network-using public has access to download using public-standard network protocols a complete Transparent copy of the Document, free of added material. If you use the latter option, you must take reasonably prudent steps, when you begin distribution of Opaque copies in quantity, to ensure that this Transparent copy will remain thus accessible at the stated location until at least one year after the last time you distribute an Opaque copy (directly or through your agents or retailers) of that edition to the public.

It is requested, but not required, that you contact the authors of the Document well before redistributing any large number of

copies, to give them a chance to provide you with an updated version of the Document.

4. MODIFICATIONS

You may copy and distribute a Modified Version of the Document under the conditions of sections 2 and 3 above, provided that you release the Modified Version under precisely this License, with the Modified Version filling the role of the Document, thus licensing distribution and modification of the Modified Version to whoever possesses a copy of it. In addition, you must do these things in the Modified Version:

- A. Use in the Title Page (and on the covers, if any) a title distinct from that of the Document, and from those of previous versions (which should, if there were any, be listed in the History section of the Document). You may use the same title as a previous version if the original publisher of that version gives permission.
- B. List on the Title Page, as authors, one or more persons or entities responsible for authorship of the modifications in the Modified Version, together with at least five of the principal authors of the Document (all of its principal authors, if it has fewer than five), unless they release you from this requirement.
- C. State on the Title page the name of the publisher of the Modified Version, as the publisher.
- D. Preserve all the copyright notices of the Document.
- E. Add an appropriate copyright notice for your modifications adjacent to the other copyright notices.
- F. Include, immediately after the copyright notices, a license notice giving the public permission to use the Modified Version under the terms of this License, in the form shown in the Addendum below.
- G. Preserve in that license notice the full lists of Invariant Sections and required Cover Texts given in the Document's license notice.
- H. Include an unaltered copy of this License.
- I. Preserve the section Entitled "History", Preserve its Title, and add to it an item stating at least the title, year, new authors, and publisher of the Modified Version as given on the Title Page. If there is no section Entitled "History" in the Document, create one stating the title, year, authors, and publisher of the Document as given on its Title Page, then add an item describing the Modified Version as stated in the previous sentence.
- J. Preserve the network location, if any, given in the Document for public access to a Transparent copy of the Document, and likewise the network locations given in the Document for previous versions it was based on. These may be placed in the "History" section. You may omit a network location for a work that was published at least four years before the Document itself, or if the original publisher of the version it refers to gives permission.
- K. For any section Entitled "Acknowledgements" or "Dedications", Preserve the Title of the section, and preserve in the section all the substance and tone of each of the contributor acknowledgements and/or dedications given therein.
- L. Preserve all the Invariant Sections of the Document, unaltered in their text and in their titles. Section numbers or the equivalent are not considered part of the section titles.
- M. Delete any section Entitled "Endorsements". Such a section may not be included in the Modified Version.
- N. Do not retitle any existing section to be Entitled "Endorsements" or to conflict in title with any Invariant Section.
- O. Preserve any Warranty Disclaimers.

If the Modified Version includes new front-matter sections or appendices that qualify as Secondary Sections and contain no material copied from the Document, you may at your option designate some or all of these sections as invariant. To do this, add their titles to the list of Invariant Sections in the Modified Version's license notice. These titles must be distinct from any other section titles.

You may add a section Entitled "Endorsements", provided it contains nothing but endorsements of your Modified Version by various parties—for example, statements of peer review or that the text has been approved by an organization as the authoritative definition of a standard.

You may add a passage of up to five words as a Front-Cover Text, and a passage of up to 25 words as a Back-Cover Text, to the end of the list of Cover Texts in the Modified Version. Only one passage of Front-Cover Text and one of Back-Cover Text may be added by (or through arrangements made by) any one entity. If the Document already includes a cover text for the same cover, previously added by you or by arrangement made by the same entity you are acting on behalf of, you may not add another; but you may replace the old one, on explicit permission from the previous publisher that added the old one.

The author(s) and publisher(s) of the Document do not by this License give permission to use their names for publicity for

or to assert or imply endorsement of any Modified Version.

5. COMBINING DOCUMENTS

You may combine the Document with other documents released under this License, under the terms defined in section 4 above for modified versions, provided that you include in the combination all of the Invariant Sections of all of the original documents, unmodified, and list them all as Invariant Sections of your combined work in its license notice, and that you preserve all their Warranty Disclaimers.

The combined work need only contain one copy of this License, and multiple identical Invariant Sections may be replaced with a single copy. If there are multiple Invariant Sections with the same name but different contents, make the title of each such section unique by adding at the end of it, in parentheses, the name of the original author or publisher of that section if known, or else a unique number. Make the same adjustment to the section titles in the list of Invariant Sections in the license notice of the combined work.

In the combination, you must combine any sections Entitled "History" in the various original documents, forming one section Entitled "History"; likewise combine any sections Entitled "Acknowledgements", and any sections Entitled "Dedications". You must delete all sections Entitled "Endorsements".

6. COLLECTIONS OF DOCUMENTS

You may make a collection consisting of the Document and other documents released under this License, and replace the individual copies of this License in the various documents with a single copy that is included in the collection, provided that you follow the rules of this License for verbatim copying of each of the documents in all other respects.

You may extract a single document from such a collection, and distribute it individually under this License, provided you insert a copy of this License into the extracted document, and follow this License in all other respects regarding verbatim copying of that document.

7. AGGREGATION WITH INDEPENDENT WORKS

A compilation of the Document or its derivatives with other separate and independent documents or works, in or on a volume of a storage or distribution medium, is called an "aggregate" if the copyright resulting from the compilation is not used to limit the legal rights of the compilation's users beyond what the individual works permit. When the Document is included in an aggregate, this License does not apply to the other works in the aggregate which are not themselves derivative works of the Document.

If the Cover Text requirement of section 3 is applicable to these copies of the Document, then if the Document is less than one half of the entire aggregate, the Document's Cover Texts may be placed on covers that bracket the Document within the aggregate, or the electronic equivalent of covers if the Document is in electronic form. Otherwise they must appear on printed covers that bracket the whole aggregate.

8. TRANSLATION

Translation is considered a kind of modification, so you may distribute translations of the Document under the terms of section 4. Replacing Invariant Sections with translations requires special permission from their copyright holders, but you may include translations of some or all Invariant Sections in addition to the original versions of these Invariant Sections. You may include a translation of this License, and all the license notices in the Document, and any Warranty Disclaimers, provided that you also include the original English version of this License and the original versions of those notices and disclaimers. In case of a disagreement between the translation and the original version of this License or a notice or disclaimer, the original version will prevail.

If a section in the Document is Entitled "Acknowledgements", "Dedications", or "History", the requirement (section 4) to Preserve its Title (section 1) will typically require changing the actual title.

9. TERMINATION

You may not copy, modify, sublicense, or distribute the Document except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, or distribute it is void, and will automatically terminate your rights under this License.

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, receipt of a copy of some or all of the same material does not give you any rights to use it.

10. FUTURE REVISIONS OF THIS LICENSE

The Free Software Foundation may publish new, revised versions of the GNU Free Documentation License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. See <http://www.gnu.org/copyleft/>.

Each version of the License is given a distinguishing version number. If the Document specifies that a particular numbered version of this License "or any later version" applies to it, you have the option of following the terms and conditions either of that specified version or of any later version that has been published (not as a draft) by the Free Software Foundation. If the Document does not specify a version number of this License, you may choose any version ever published (not as a draft) by the Free Software Foundation. If the Document specifies that a proxy can decide which future versions of this License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Document.

11. RELICENSING

"Massive Multiauthor Collaboration Site" (or "MMC Site") means any World Wide Web server that publishes copyrightable works and also provides prominent facilities for anybody to edit those works. A public wiki that anybody can edit is an example of such a server. A "Massive Multiauthor Collaboration" (or "MMC") contained in the site means any set of copyrightable works thus published on the MMC site.

"CC-BY-SA" means the Creative Commons Attribution-Share Alike 3.0 license published by Creative Commons Corporation, a not-for-profit corporation with a principal place of business in San Francisco, California, as well as future copyleft versions of that license published by that same organization.

"Incorporate" means to publish or republish a Document, in whole or in part, as part of another Document.

An MMC is "eligible for relicensing" if it is licensed under this License, and if all works that were first published under this License somewhere other than this MMC, and subsequently incorporated in whole or in part into the MMC, (1) had no cover texts or invariant sections, and (2) were thus incorporated prior to November 1, 2008.

The operator of an MMC Site may republish an MMC contained in the site under CC-BY-SA on the same site at any time before August 1, 2009, provided the MMC is eligible for relicensing.